



INSTRUCTION MANUAL

Before using our 75W LED light engine, please read below instruction carefully. Any problems, please contact with us.

75W-LED Light engine guarantee one year



SAFE WARNING:

1. Check supply voltage, whether it matches light engine.
2. Prohibit to place the machine under rain or wet spot, prevent from causing troubles or danger of electric shock.
3. Light engine should be used in a draughty surrounding, not stack other things around it.



PARAMETER:

Supply voltage: 220-240V /AC

 
 
 
Power frequency: 50Hz-60Hz

Power: 75 w

Body Measurement: L 278* W195* H76 mm
(without connector)



Operation Illustration:

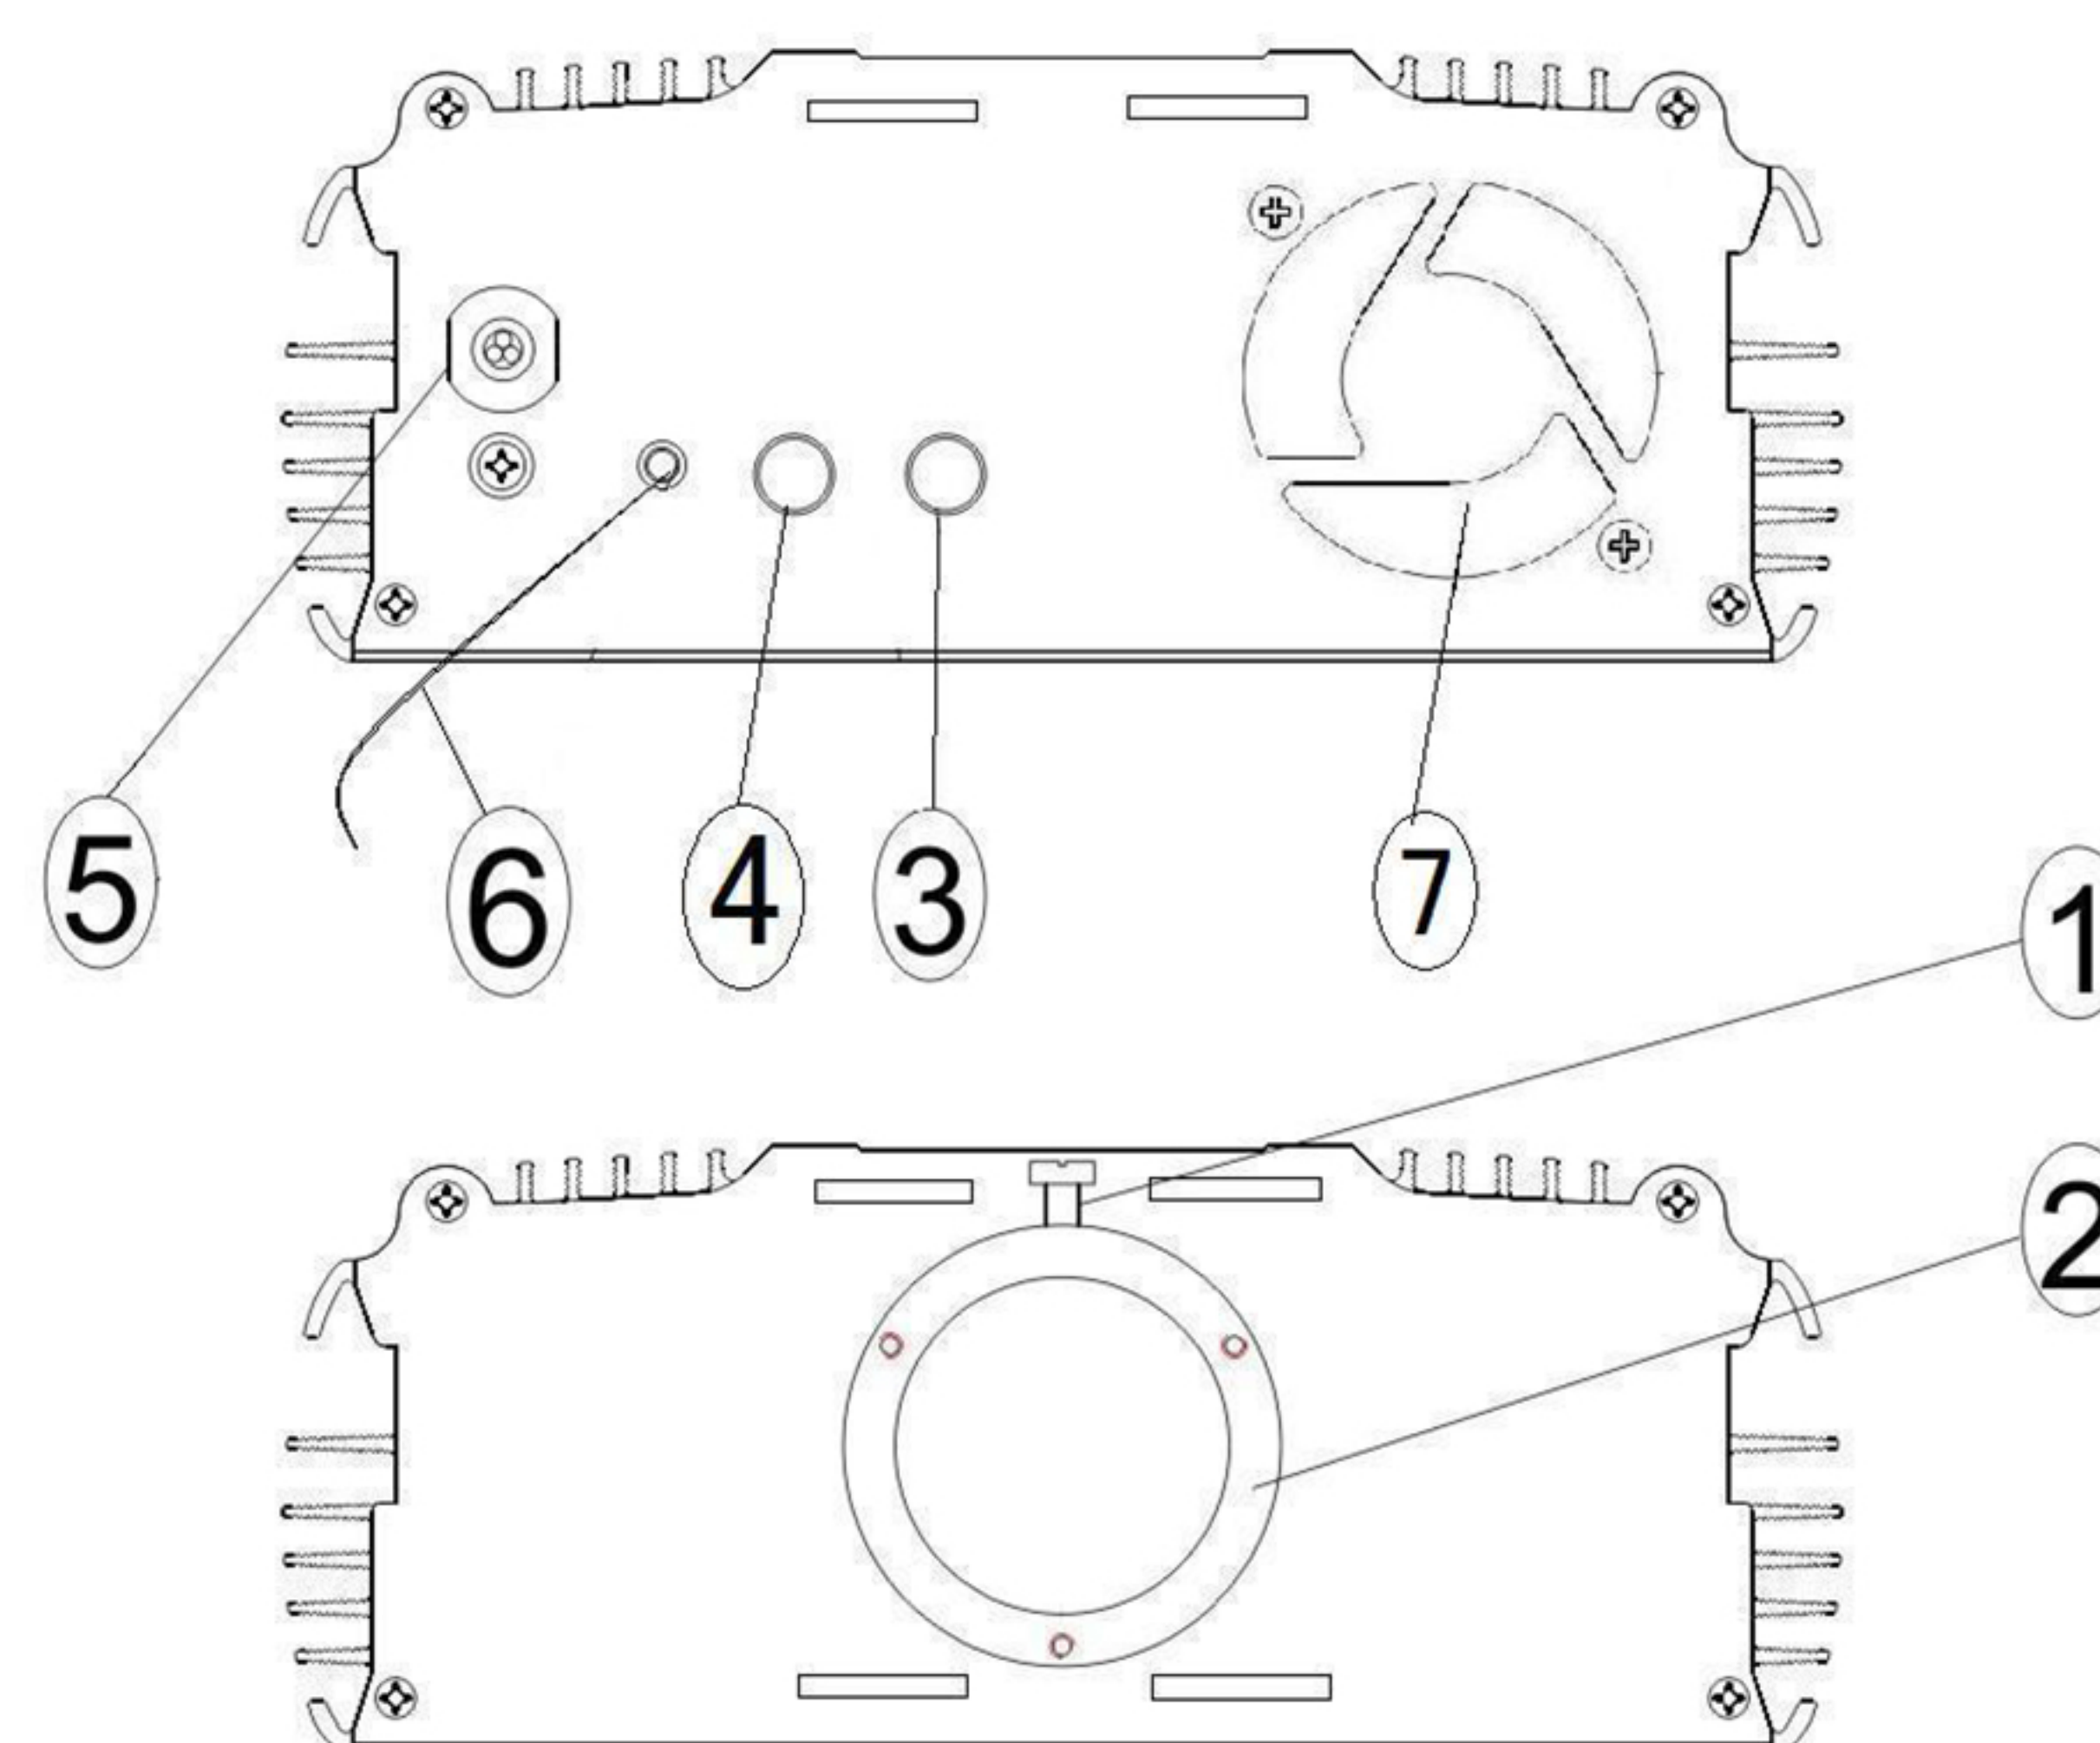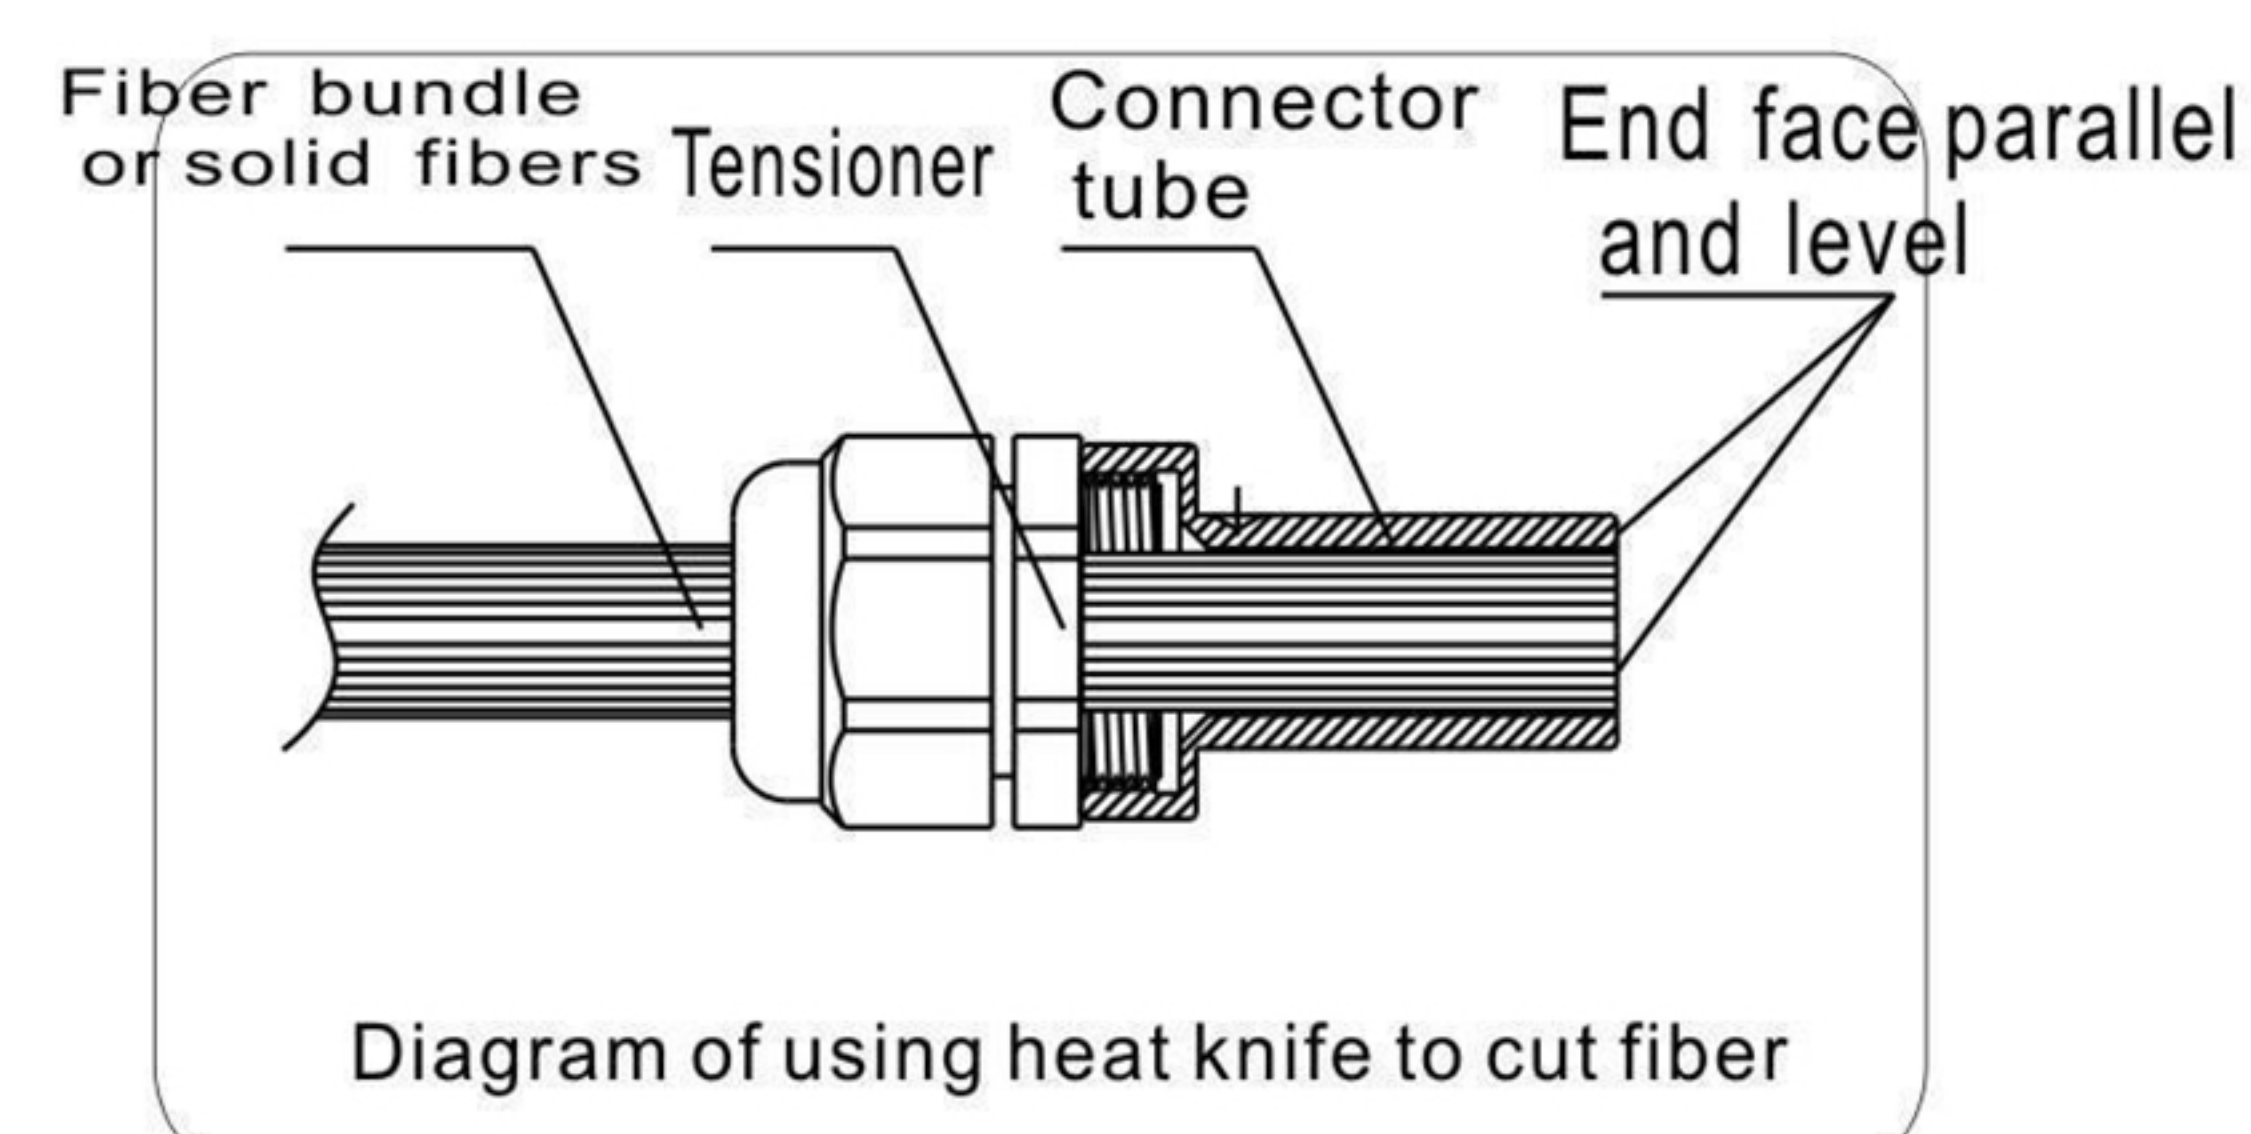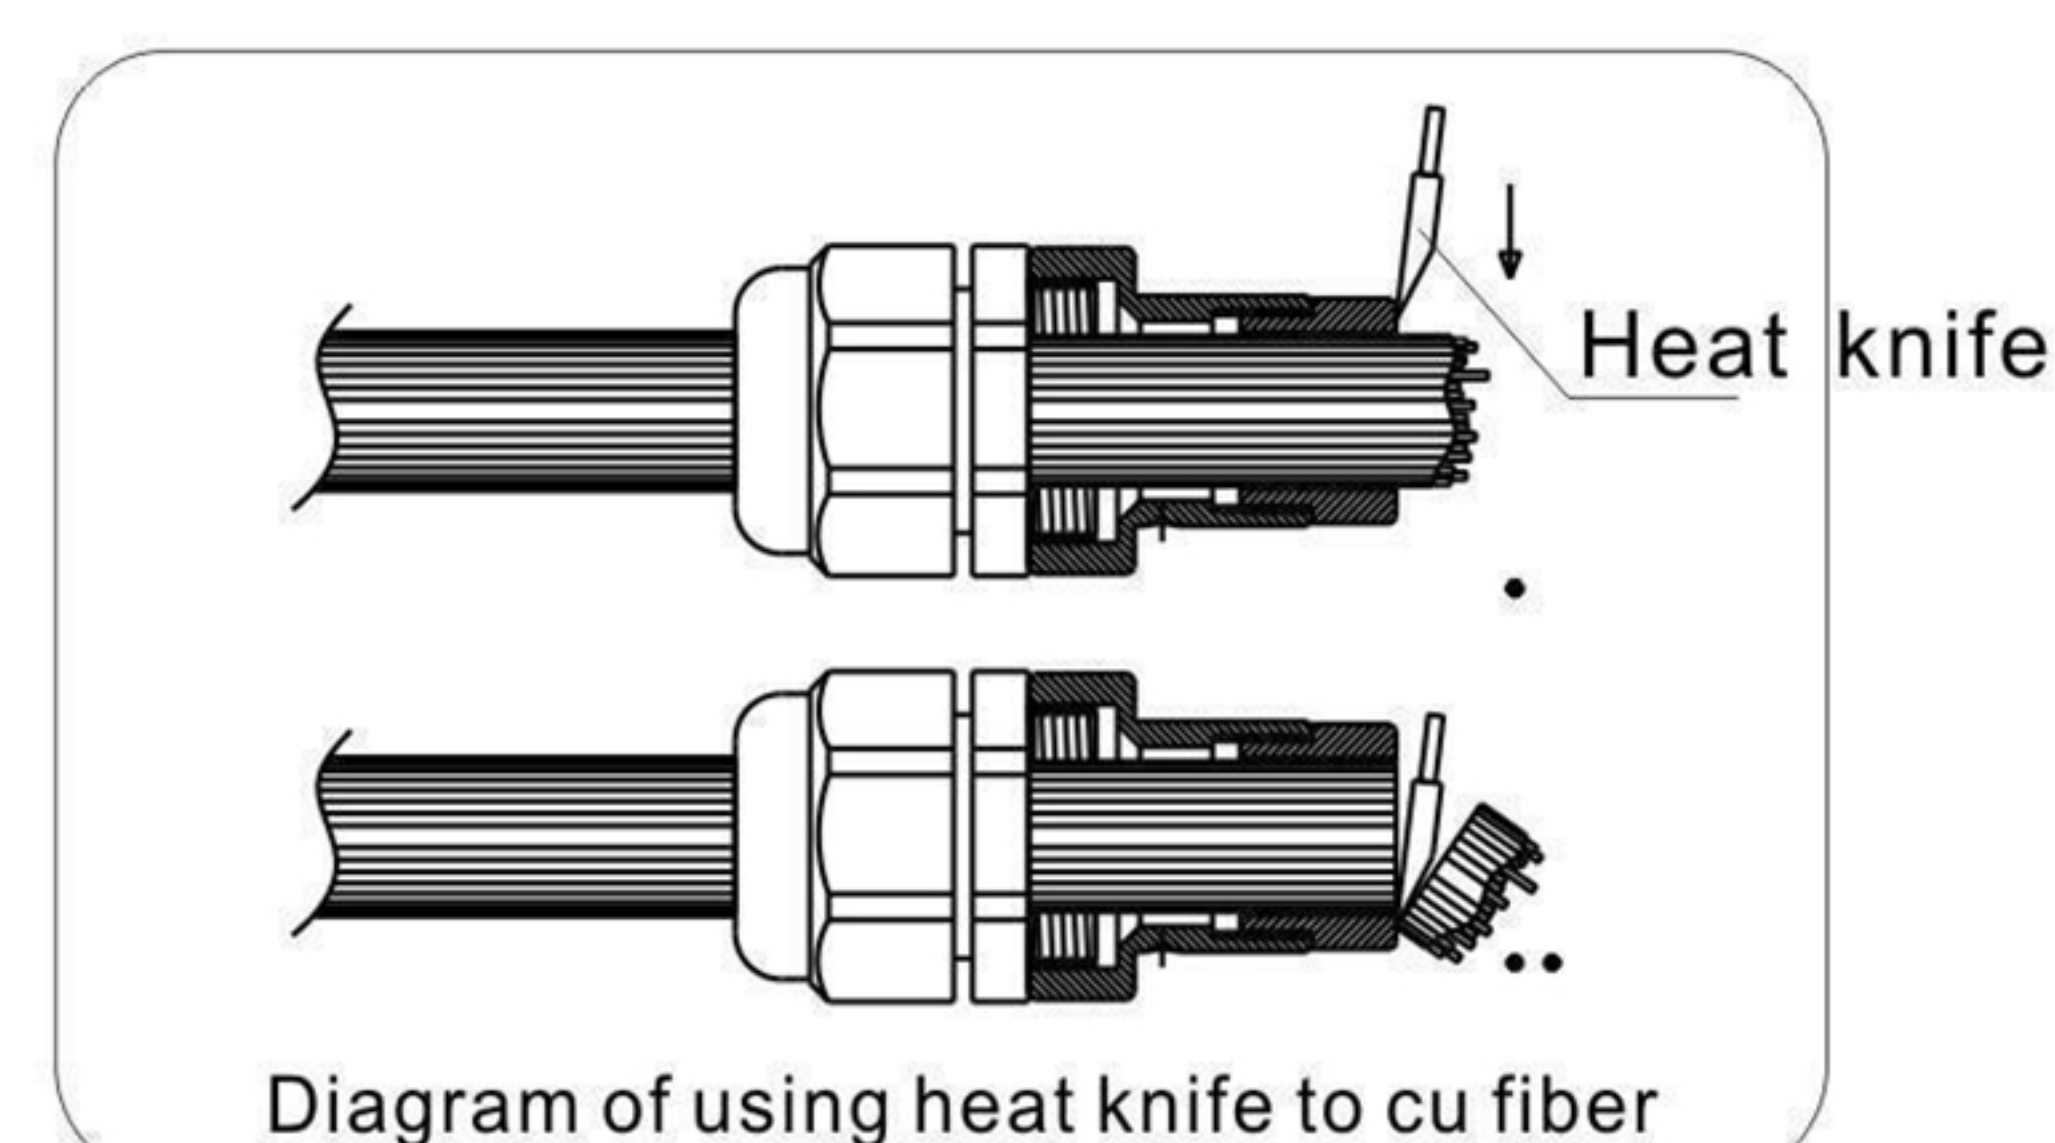

1. Lock screw

3. Power on/off

5. Power line

2. Fixed ring

4. Model button

 
6. Receiver line

7. Fan



Program option:

About the model button:

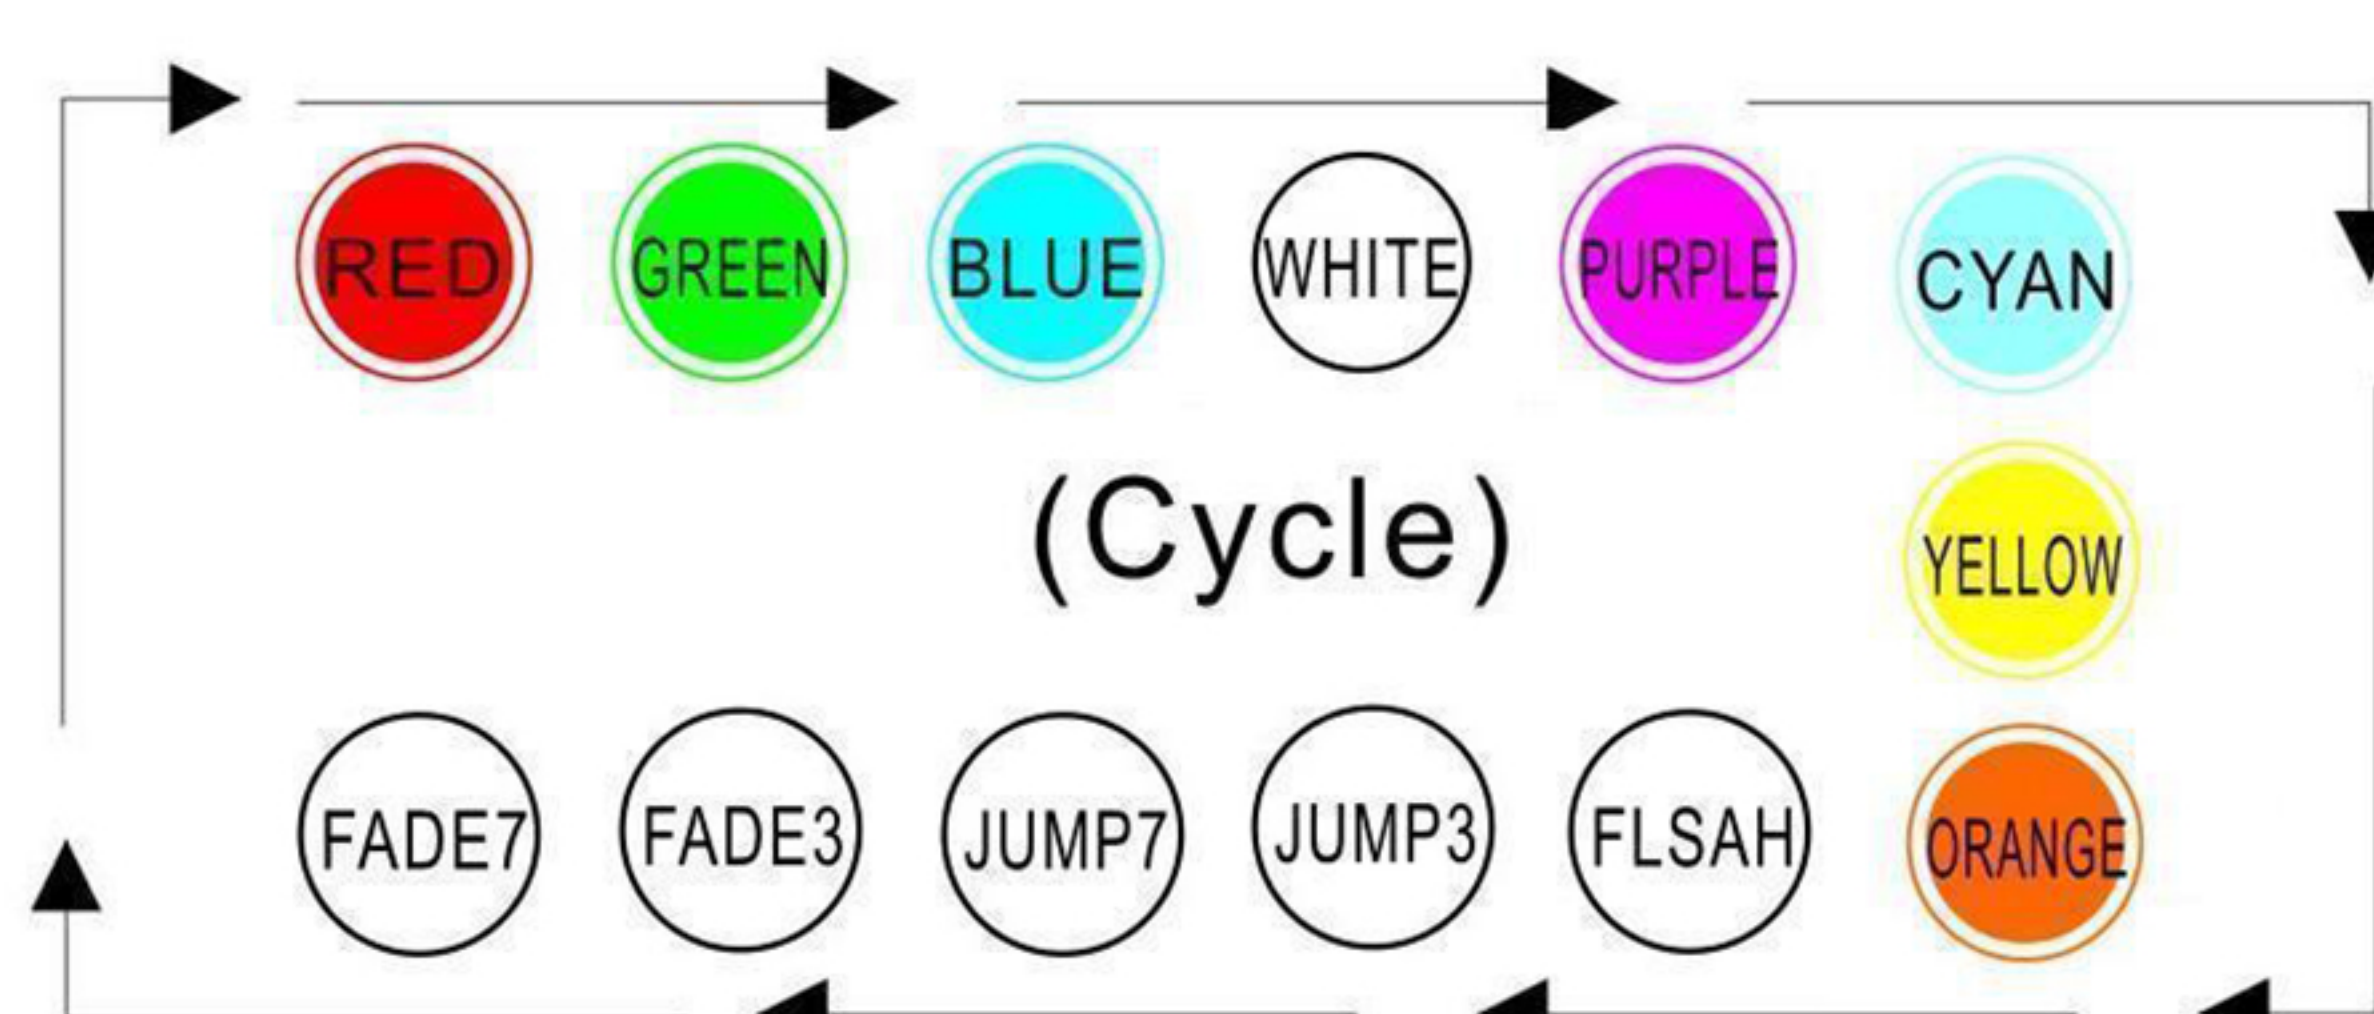


For example, if you using YELLOW, press the model button, it will turns to ORANGE, press again, turns to FLSAH

Brightness up
Brightness down

Fix color

 Model select
AUTO: cyclic

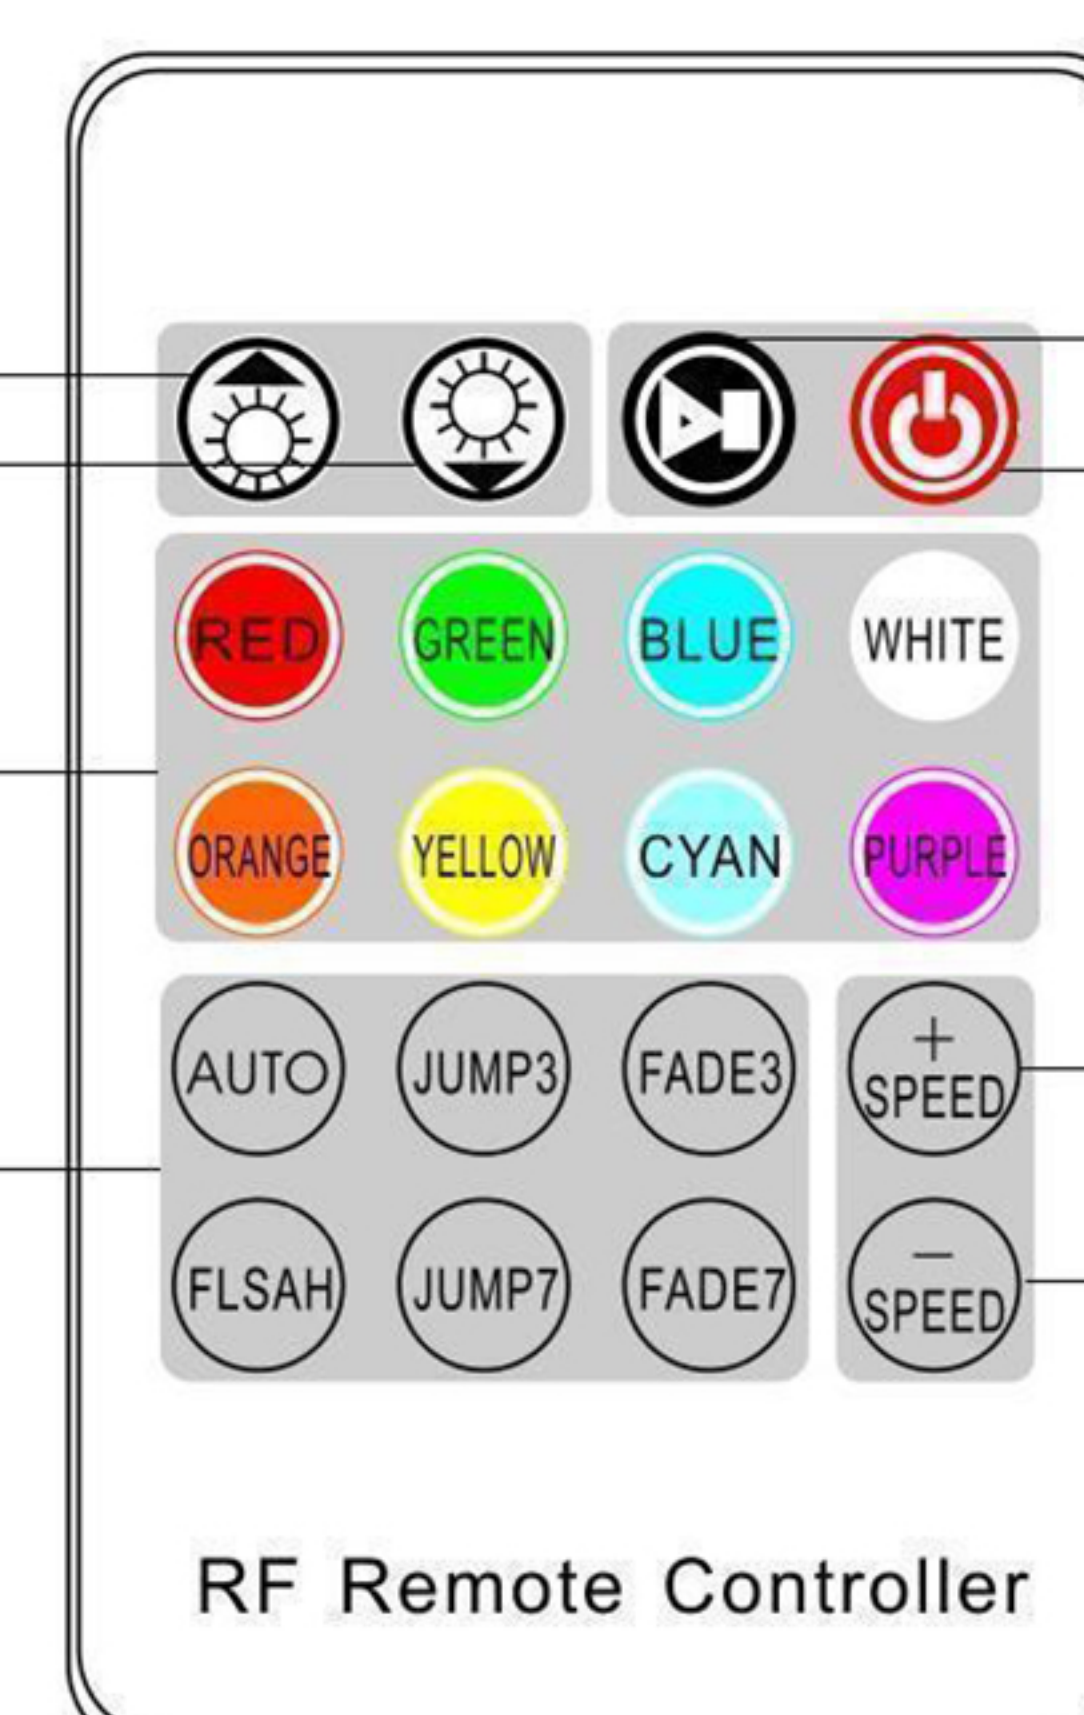

Light off
Light on

Speed up
Speed down